


Swash Plate Type Axial Piston Pump K3VLS Series

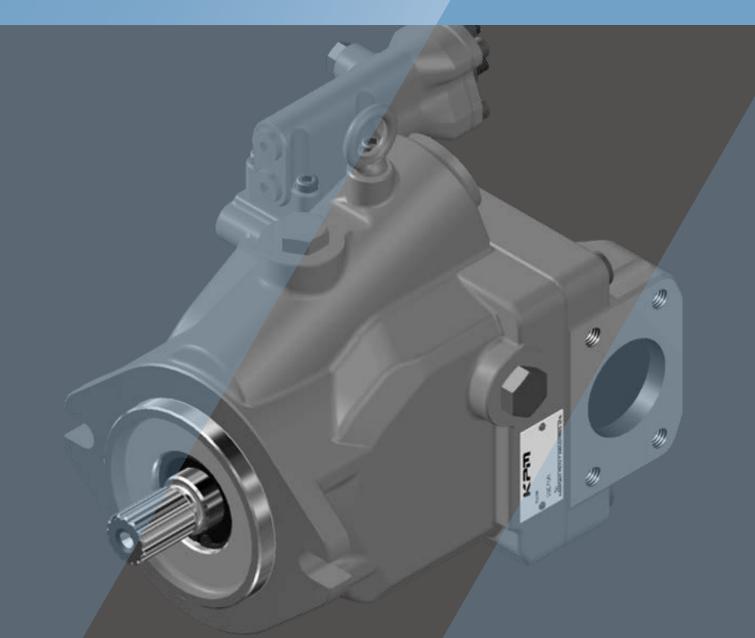

CONTENTS

I . Applications / Product Usage	2
II. Safety Precautions	3
II. Handling Precautions	
1. Operating Fluid and Temperature Range	4
1) Operating Fluid	
2) Viscosity and Temperature Range	
2. Filtration and Contamination Control	
1) Filtration of Working Oil	
2) Suggested Acceptable Contamination Level	
3. Drive Shaft Coupling	5
4. Oil Filling and Air Bleeding	
1) Pump Case Filling	
2) Air Bleeding	
3) Long Term Out of Usage	
5. Drain Piping	6
1) Installation of Drain Line	
2) Size of Drain Hose or Drain Pipe	
6. Mounting the Pump Above the Tank	7
7. Shaft Loading and Bearing Life	
IV. Conversion Factors, Formula and Definition	8
•K3VLS Series Swash Plate Type Axial Piston P	ump
Specifications and Features	10
(Specifications, General Descriptions, and features)	
1. Ordering Code	
1-1. Pump Options	11
1-2. Regulator Options	12
2. Technical Information	
2-1. Specifications	13
2-2. Functional Description of Regulator	14
LO/L1: Load Sensing and Pressure Cut-off	
Torque Limiter (Torque limit control code: A)	15
Torque Limiter with Power shift (Torque limit co	ntrol code: B,C) 16
3. Dimensions	
3-1. Installation Dimensions	
◆K3VLS65	17
◆K3VLS85	23
◆K3VLS105	27
3-2. Installation of Auxiliary Pumps	32
K3VLS Series Inquiry Form	34

1

I. Applications / Product Usage

The following must be taken into consideration before use.

- The operating condition of the products shown in this catalog varies depending upon each application. Therefore, the product suitability must be judged by the designer of the hydraulic system and/ or the person who finalizes the technical specifications of the machine after analysis and testing. The product specification shall be determined based on the latest catalog and technical documents. The system must be designed taking into account the possibility of machine failure to ensure that all safety, warning, and application requirements are met.
- For the proper use of the products, descriptions given in the SAFETY PRECAUTIONS must be observed.
- The technical information in this catalog represents typical characteristics and performance of the products as of the published date.

- If the intended use of the products is included in the following, please consult with Kawasaki in advance
 - (1) Use the product in the operating conditions or environments other than those described in the technical documents
 - (2) Use the product in the nuclear sector, aviation sector, medical sector, and/or food sector.
 - (3) Use the product in applications which may cause substantial harm to others and their property, and especially in applications where ensuring safety is a requirement.
- 5. The information described in this catalog is subject to change without notice. For the latest information, please contact Kawasaki.

II. Safety Precautions

Before using the product, you MUST read this catalog and MUST fully understand how to use the product. To use the product safely, you MUST carefully read all Warnings and Cautions in this catalog.

1. Cautions related to operation



- Use the personal protective equipment to prevent injury when the product is in operation.



- Some components are heavy. Handle the product carefully not to hurt your hands and lower back.



- Do not step on, hit or drop, or apply strong force to the product, as these actions may cause operation failure, product damage, or oil leakage.



- Wipe off any oil on the product or the floor completely, as oil can create slippery conditions that may cause drop of the product and personal injury.

2. Warnings and cautions related to installation and removal of the product



- Installation, removal, piping, and wiring must be done by a qualified technician.



- Make sure that the hydraulic power unit is turned off and that the electric motor or engine has completely stopped before starting installation or removal. You must also check that the system pressure has dropped to zero.



- Make sure that the power source is turned off before installing electric components to reduce the risk of electric shock.



- Clean the threads and the mounting surface to prevent damage or oil leakage. Inadequate cleaning may cause insufficient torque and broken seals.



 Use the designated bolts and fasten them with prescribed torque when installing the product.
 Use of undesignated bolts, and excessive or insufficient tightening torque may induce operation failure, damage, or oil leakage.

3. Warnings and cautions for operation



- Always equip the product with explosion or ignition protection if it is used in potentially explosive or combustible atmospheres.



- Shield rotating parts, such as the motor and pump shaft, to avoid injuries.



- Stop operation immediately, and take proper measures when the abnormality such as unusual noise, oil leakage, and smoke is found. Continuing operation under such condition may bring about damage, a fire hazard, or injury.



- Make sure that all pipes, hoses, and connecting points with pipes or hoses, are correctly connected and tightened before starting operation.



- Use the product under the operating conditions and limitations described in the catalog, drawings, and specification sheets.



- Do not touch the product in operation. to reduce the risk of skin burn.



- Use the proper hydraulic oil and maintain the filtration at the recommended level to prevent premature wear and damage.

4. Cautions related to maintenance



 Never modify the product without approval from Kawasaki.



- Disassembly of the product may void the warranty.



- Keep the product clean and dry when storing or transporting.



- The seals may need to be replaced if the product has been stored for an extended period of time.

1. Operating Fluid and Temperature Range


1) Operating fluid

Values shown in this catalog are based upon using mineral oil based anti-wear hydraulic fluid. To ensure optimal performance use of mineral oil based anti-wear hydraulic fluid is recommended.

2) Viscosity and temperature range

To minimize both oil and seal deterioration, a maximum operating temperature of 60°C should be considered. Additionally it must be noted that when operating at low temperatures in winter (15 \sim 20°C) some delay in response of the regulator may occur. At such low temperatures it is strongly suggested that a warm up cycle is introduced until an operating temperature of 20°C is achieved.

	Normal operating range	Allowable range	
Viscosity [mm ² /s(cSt)]	10 ~ 200	10 ~ 1,000	
Fluid temperature [°C (°F)]	-20 ~ +95 (-4 ~ +203)		

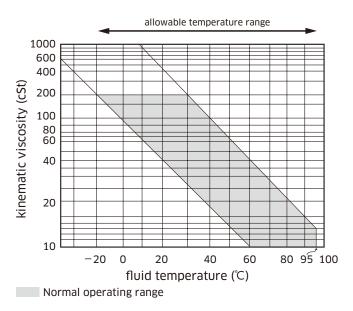

2. Filtration and Contamination Control

1) Filtration of working oil

The most important means to prevent premature damage to the pump and associated equipment and to extend its working life, is to ensure that hydraulic fluid contamination control of the system is working effectively.

This begins by ensuring that at the time of installation that all piping, tanks etc. are rigorously cleaned in a sanitary way. Flushing should be provided using an off line filtration system and after flushing the filter elements should be replaced.

A full flow return line filter of 10 micron nominal should be utilised to prevent contaminant ingress from the external environment, a 5 to 10 micron filter with the tank's breather is also recommended.


2) Suggested acceptable contamination level

The relationship between contamination level and pump life ise very difficult to predict as it depends on the type and nature of the contaminant present in the system. Sand or Silica in particular, due to its abnrasive nature, does significantly reduce the expected life of a pump. Based on the precondition that there is no significant presence of Silica type substances then a minimum Cleanliness level of -/18/15 ISO 4406 or SAE AS 4059E Table 1 Class 9 (NAS 1638 Class 9).

3. Drive Shaft Coupling

Alignment between the prime mover and the pump shaft should be within 0.05 mm TIR^{*}. In case the pump is directly coupled to the engine flywheel, use a flexible coupling.

*TIR = Total Indicator Reading

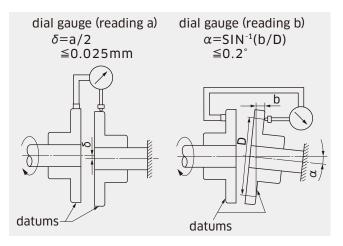

4. Oil Filling and Air Bleeding

1) Pump case filling

Be sure to fill the pump casing with oil through the drain port, filling only the suction line with oil is totally in-sufficient. The pump contains bearings and high-speed sliding parts including pistons with shoes and a spherical bush that need to be continuously lubricated. Part seizure or total premature failure will occur very quickly if this procedure is not rigidly followed.

2) Air bleeding

Run the pump unloaded for a period to ensure that all residual air within the system is released.


3) Long term out of usage

It is undesirable to leave th epump out of use for a long period e.g. a year or more. In such a situation it is recommended that the pump is run for a short period on a more frequent basis even if it is just unloaded. With regard to a pump held in storage then rotating the shaft on a frequent basis is sufficient. If the pump is left out for more than the suggested time it will require a service inspection.

5. Drain Piping

1) Installation of drain line


It is the preferred option to mount the pump with the case drain piping initially rising above the pump before continuing to the tank. Do not connect the drain line to the inlet line.

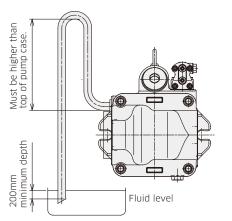

Cautions

- A) Inlet and drain pipes must be immersed by 200 mm minimum from the lowest level under operating conditions.
- **B)** Height from the oil level to the centre of the shaft must be within 1 meter maximum.
- **C)** The oil in the pump case must be refilled when the pump has not been operated for one month or longer.

The uppermost drain port should be used and the drain piping should be equal or larger in size than the drain port to minimise pressure in the pump case. The pump case pressure should not exceed 0.1MPa as shown in the illustration below. (Peak pressure should never exceed 0.4MPa.)

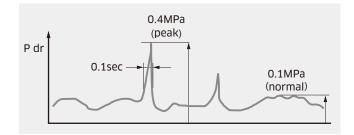


2) Size of drain hose or drain pipe

The internal bore size of the drain hose or drain pipe must be larger than that of the drain port. Arrange the drain line as short as possible.

6. Mounting the Pump Above the Tank

Suction line

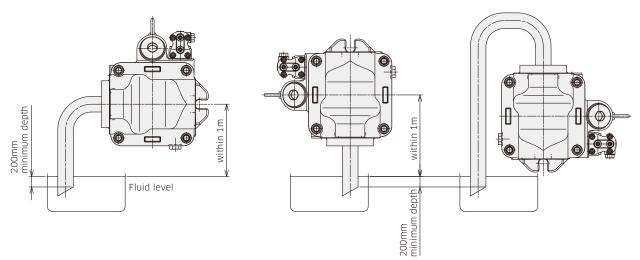

7. Shaft Loading and Bearing Life

Although K3VLS pumps are equipped with bearings that can accept some external thrust and radial forces, application of such loads will affect bearing life. Depending on the load magnitude, the load position, and the load orientation, bearing life may be significantly reduced.

W. Conversion Factors, Formula and Definition

Conversion Factors

	Formula	Note
Displacement	1 cm ³ = 0.061 in ³	
Pressure	1 MPa = 145 psi	
Flow	1 L/min = 0.264 gpm	US gallon
Torque	1 Nm = 0.74 lb ft	
Power	1 kW = 1.341 hp	
Weight	1 kg = 2.205 lbs	

🔶 Formula

	Metric system		Imperial system	
Output flow	$Q = q \times N \times \eta_v / 1000$	L/min	$Q = q \times N \times \eta_v / 231$	gal/min
Input torque	$T = q \times \Delta P / 2\pi / \eta_m$	Nm	$T = q \times \Delta P / 24\pi / \eta_m$	lbf ft
Input power	L = T x N / 9550 = Q x Δ P / 60 / η_{t}	kW	L = T x N / 5252 = Q x Δ P / 1714 / η_{t}	hp

Definition

q	=	Pump displacement / rev.	cm ³ (in ³)
L	=	Input power	kW (hp)
Ν	=	Speed	min-1 (rpm)
ΔΡ	=	P _d - P _s	MPa (psi)
Pd	=	Pump delivery pressure	MPa (psi)
Ps	=	Pump suction pressure	MPa (psi)
ΡL	=	Load sensing pressure	MPa (psi)
Pdr	=	Pump case pressure	MPa (psi)
Pf	=	Power shift pressure	MPa (psi)
Psv	=	Servo pressure	MPa (psi)
Т	=	Input torque	Nm (lbf-ft)
T _{max}	=	Maximum input torque	Nm (lbf-ft)
η_v	=	Pump volumetric efficiency	
$\eta_{\rm m}$	=	Pump mechanical efficiency	
η_{t}	=	Pump total efficiency	

MEMO

·····

K3VLS Series

Swash Plate Type Axial Piston Pump



Specifications

Size : 50*, 65, 85, 105, 125*, 150* Rated Pressure : 28 MPa Peak Pressure : 35 MPa

General Descriptions

The K3VLS are variable displacement axial piston pumps of swash plate design, suitable for use in mobile applications and industrial vehicles with middle pressure hydraulic systems.

The K3VLS pumps enable flexible configuration in a wide range of applications with their compact size and light weight design.

The K3VLS series pumps are available in size (rated displacement) ranging from 50 to 150 cm³/rev with various control options, such as load sensing, pressure cut-off, and horsepower controls.

Features

- Variable axial piston pump of swash plate design in open circuits
- High overall efficiency
- Compact size
- Light weight
- Excellent reliability
- Numerous control options
- High stability
- Highly responsive controls
- (*) means under development

1 Ordering Code 1-1 Pump Options

	1			2
	Model Code K3VI	_S	1	05
1. K3	VLS Series Pump			
	S Series, Variable Displacement,			
Axial	Piston, Open Loop Pump			
2 Du	mp Size —			
2. FU		65	85	105
Ma	ximum Displacement cm ³	•	•	•
, o-i	ring Material (Oil seal in Viton only) ————			
5. 0-1	NBR O-ring seals			
	ries Type Code			
1	Standard Type			
5. Th	rough Drive and Porting			
		65	85	105
0	Without Through Drive, Side Ported			
Α	SAE-A Through Drive, Side Ported			
В	SAE-B Through Drive, Side Ported			
BB	SAE-BB Through Drive, Side Ported			
С	SAE-C, 2/4 bolt, Through Drive, Side Ported			
CC		-	-	
D	SAE-D Through Drive, Side Ported	-	-	_
N	With Through Drive Shaft, Without Coupling,			
	Closed with Steel Cover,Side Ported			
R	Without Through Drive, Rear Ported			
5. Dir	rection of Rotation			
-		65	85	105
R	Clockwise	•		
L	Counterclockwise			
7. Mo	ounting Flange and Shaft			
		65	85	105
В	SAE-B Mount & SAE-B Spline		-	_
BB	SAE-B Mount & SAE-BB Spline		-	—
С				
CC	SAE-C Mount & SAE-CC Spline			
D	SAE-D Mount & SAE-D Spline	-		-
8. Fla	Inge Fixing Thread (Suction/Delivery) ————			
		65	85	105
		1	1	

			65	85	105
	5	SAE 4-bolt Flange, UNC Threaded			
ŀ	Η	SAE 4-bolt Flange, Metric Threaded			

• : Available

— : Not available

1. Ordering Code

1-2 Regulator Options

2 3 4 5 6 7 8 9 10 11 12 1 K3VLS 105 - 1 BB R CC S - L1 A A M1 Model Code 9. Flow Control -Load Sense & Pressure Cut-Off 65 85 105 LO with LS Bleed-off Orifice L1 without LS Bleed-off Orifice 10. Differential Pressure Setting Range (For the details see page 14) -65 85 105 Standard Setting Range (1.0~3.0MPa) А С High Setting Range (1.5 \sim 4.0MPa) $\bullet \mid \bullet \mid \bullet$ 11. Additional Control Options -65 85 105 Blank Without Any Additional Control **Torque Limit Control** 65 85 105 without Power Shift Control А \bigcirc 0 with Power Shift Control В 0 \bigcirc \bigcirc Pilot operated with Electric Proportional Reducing Valve Voltage:24V, AMP Connecter \bigcirc 0 C1 C2 Voltage:24V, Deutsch Connecter \bigcirc Ο \bigcirc \bigcirc C3 Voltage:12V, Deutsch Connecter 12. Torque Limit Setting (Available only with the attachment of Torque Limiter) -****** For Torque Limiting Refer To Horsepower Setting Code (Under Preparation)

• : Available

○ : Under development

2 Technical Information 2-1 Specifications

Size			65	85	105			
Displacement cm ³			65	85	105			
Droccuro	Rated	MPa		28				
Pressure	Peak	MPa		35				
Allowable case pressure		MPa	0.1	continuous / 0.4 peak				
Speed	Self prime*1	min-1	2,600	2,500	2,300			
Speed	Maximum*2	min-1	3,000	3,000	2,640			
Case volume		L	1.0	1.2	1.7			
Temperature range		°C	$-20 \sim +95$					
Viscosity range		cSt	10 ~ 1,000					
Maximum contamination I	evel		ISO 4406 -/18/15					
		SAE A	123	123	123			
Allowable through drive to	oraue Nm	SAE B	380	380	380			
		SAE BB	435	435	435			
		SAE C	—	435	435			
Mass kg		22	30	37				
Moment of Inertia (GD ²) N-m ²			1.64×10 ⁻²	2.21×10 ⁻²	3.33×10-2			
Torsional Stiffness Nm/rad			5.26×104	6.74×104	1.32×10 ⁵			

*1 : Self prime speed is the maximum operating speed under the self priming condition at maximum displacement.
 Steady state inlet pressure should be greater or equal to 0 MPa gauge.

*2 : Maximum speed is the maximum operating speed that can run without damage to the pump under restriction of operating conditions.

Allowable maximum input torque

	SAE B	SAE BB	SAE C	SAE CC
Spline specification	13T DP=16/32	15T DP=16/32	14T DP=12/24	17T DP=12/24
Allowable maximum input torque (Nm)	200	315	630	1,060
Pump size	K3VLS65	K3VLS65	K3VLS65/85/105	K3VLS105

Input spline specification is based on SAE J744.

The shaft surface will have a finite life due to wear unless adequate lubrication is provided.

2. Technical Information

2-2 Functional Description of Regulator


L0 / L1: Load Sensing and Pressure Cut-off

This regulator has function of flow and pressure control (i.e. load sensing control and pressure cutoff control.)

To control flow a variable orifice is used. (A variable orifice is not included in the pump and shall be prepared separately.) Pump displacement is controlled to maintain the differential pressure across the orifice constant. The flow is controlled to a required flow regardless of pump delivery pressure. In addition, there is a pressure cut off function incorporated into the control. The pressure cut-off function overrides the flow control function.

L0 control: with a bleed off orifice L1 control: without a bleed off orifice

Releasing the pressure at port PL results in standby condition, which provides zero flow at unloading condition. The unloading pressure is typically 0.1 \sim 0.2 MPa higher than differential pressure setting.

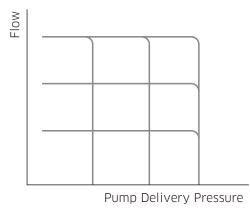

Flow, Pressure control curve

Differential pressure setting range


Load sensing differential pressure range can be selected from two setting ranges. The factory setting of the differential pressure is 1.5 MPa.

		unit: MPa
Code	Adjustment range	Adjustment sensitivity
A	1.0 ~ 3.0	1.3 / turn
С	1.5 ~ 4.0	2.5 / turn

Pressure cut-off setting range

The pressure cut-off setting range is from 2MPa to 28MPa, as shown below. The factory setting of the cut-off pressure is 28 MPa.

	unit: MPa
Adjustment range	Adjustment sensitivity
2.0 ~ 28.0	8.0 / turn

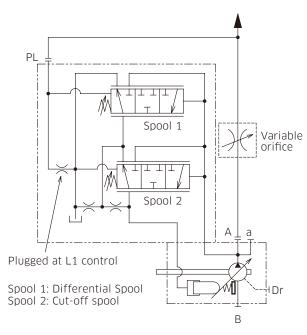

Hydraulic circuit

2-2 Functional Description of Regulator


Torque Limiter(*1) (Torque limit control code: A)

LO/L1 control functions as previously noted. In response to a rise in delivery pressure the swash plate angle is decreased, restricting the input torque. This regulator prevents excessive load against the prime mover.


The torque limit control module is comprised of two springs that oppose the spool force generated by the system pressure. By turning the adjustment screws, the appropriate input torque limit can be set.

Specify the required torque setting when ordering.

(* 1) : Torque limiter control is under development.

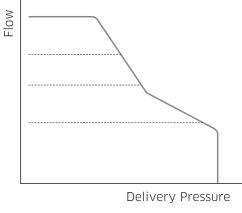

Torque limiter control curve

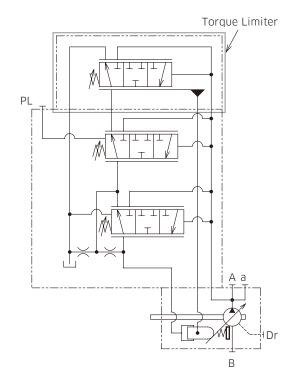

Hydraulic circuit

2. Technical Information

2-2 Functional Description of Regulator


Torque Limiter with Power Shift(* 1)

(Torque limit control code: B, C)

Torque limiter is available with variable torque limit control. Torque limit setting can be varied by the external pilot pressure supply (code "B") or the integrated electric proportional control valve with the external servo pressure supply (code "C"). Code "B" and "C" enable to shift the power control setting as shown in the following torque limiter control characteristic curve.


Specify the required variable torque setting range when ordering.


(*1): Torque limiter control is under development.

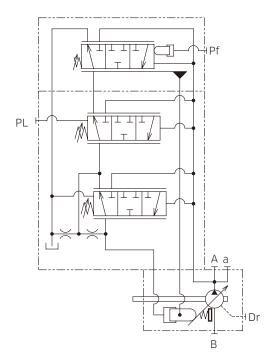

External pilot pressure (Pf) range: 0 \sim 4.0 MPa

Hydraulic circuit, code B

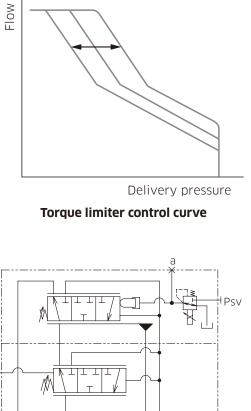

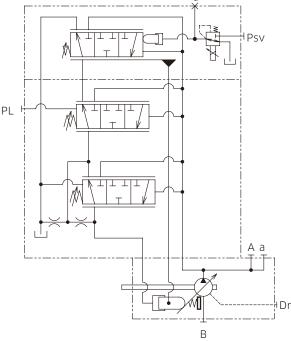

Minimum required servo pressure (Psv): 3.5 MPa

Hydraulic circuit, code C


3-1 Installation Dimensions

*Dimensions in mm.

K3VLS65 with Cut-off/Load Sense Control (Clockwise Rotation)

Model Code : <u>K3VLS 65 - 1 0 R BB * - L1 A</u>

Model Code : <u>K3VLS 65</u> - <u>1</u> <u>0</u> <u>R</u> <u>BB</u> \star - <u>L0</u> <u>A</u>

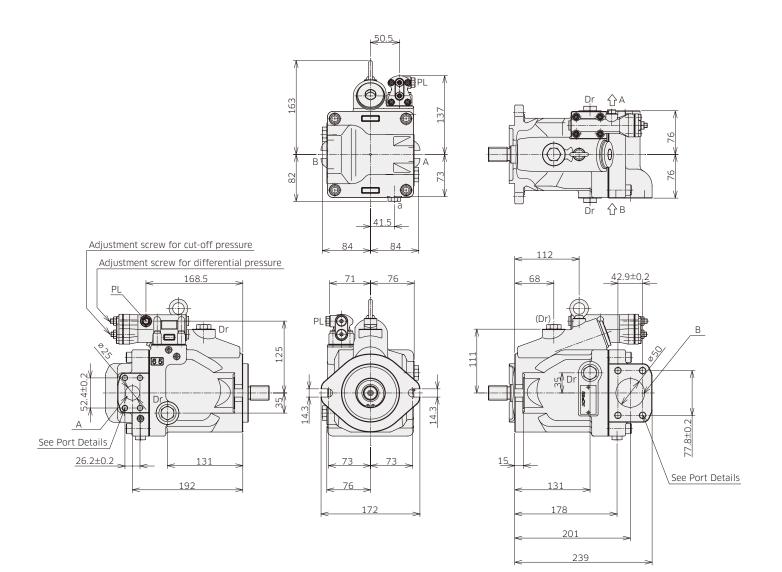


3-1 Installation Dimensions

* Dimensions in mm.


K3VLS65 Mounting Flange and Shaft Options

SAE BB Spline Shaft Ordering Code "7 Mounti



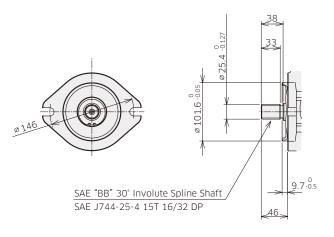

SAE B Spline Shaft Ordering Code "7.Mounting Flange and Shaft": B

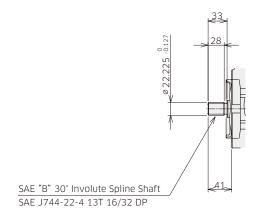


3-1 Installation Dimensions

* Dimensions in mm.

K3VLS65 with Cut-off/Load Sense Control (Clockwise Rotation, SAE C-4 Mount Type)

Model Code :K3VLS $\underline{65} - \underline{1} \ \underline{0} \ \underline{R} \ \underline{C} \ \underline{*} - \underline{L1} \ \underline{A}$ Model Code :K3VLS $\underline{65} - \underline{1} \ \underline{0} \ \underline{R} \ \underline{C} \ \underline{*} - \underline{L0} \ \underline{A}$

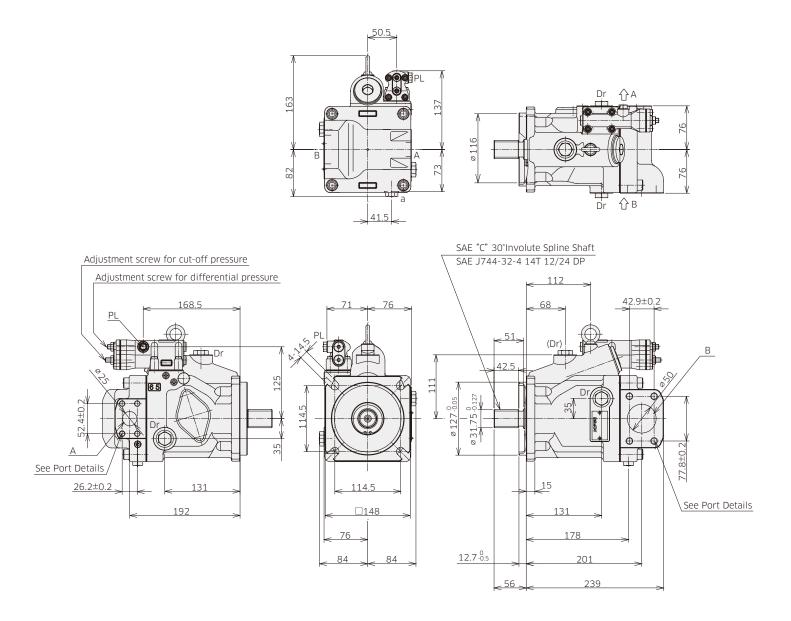

Involute spline according to ANSI B92.1a, 30° pressure angle, flat root, side fit


3-1 Installation Dimensions


* Dimensions in mm.

K3VLS65 Rear Port (Clockwise Rotation)

Model Code : <u>K3VLS 65</u> - <u>1 R R BB</u> <u>*</u> - <u>L1 A</u>

Model Code : K3VLS 65 - 1 R R BB * - LO A

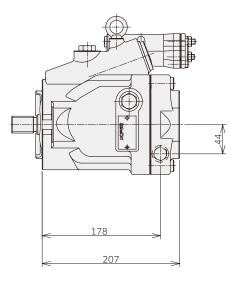

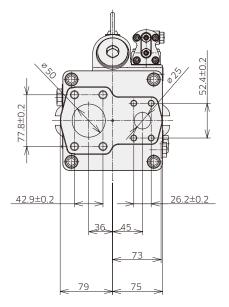

K3VLS65 Porting Details

Main SAE Flanged Ports

Des	Port name	Port size	Flange threads		
UNF Threaded Version ('S' in position 8 of model code)					
A	Delivery Port	SAE J518C std pressure (code 61) 1"	3/8-16UNC-2B-18		
В	Suction Port	SAE J518C std pressure (code 61) 2"	1/2-13UNC-2B-20		

Metric Version ('H' in position 8 of model code)

А	Delivery Port	SAE J518C std pressure (code 61) 1"	M10-17
В	Suction Port	SAE J518C std pressure (code 61) 2"	M12-20

Auxiliary Ports

Des	s Port name Port size		
SAE Version			
Dr	Drain Port	3/4-16 UNF-2B-14.3 (ISO 11926-1: 1995)	
PL	Load Sensing Port	7/16-20 UNF2B-11 (ISO 11926-1: 1995)	
а	Gauge Port	9/16-18 UNF-2B-12.7 (ISO 11926-1: 1995)	


3-1 Installation Dimensions

* Dimensions in mm.


K3VLS65 Through Drive Options

Through Drive SAE A

Ordering Code "5.Through Drive and Porting": A

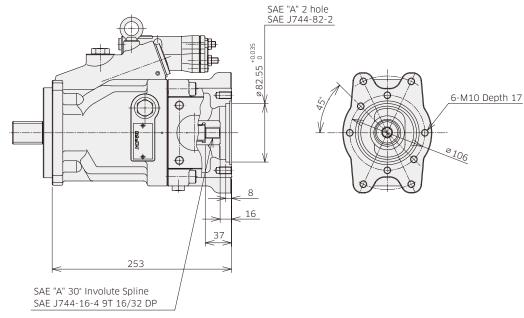

Through Drive SAE B Ordering Code "5.Through Drive and Porting": B

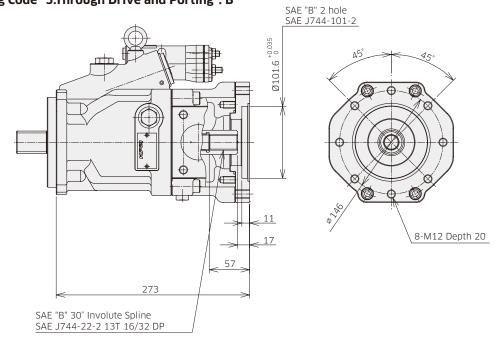


3-1 Installation Dimensions

* Dimensions in mm.


K3VLS65 Through Drive Options

Through Drive SAE BB

Ordering Code "5.Through Drive and Porting": BB

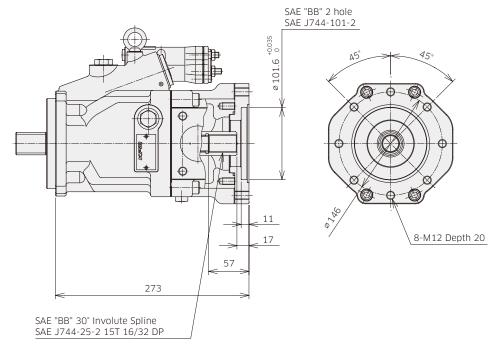

Through Drive SAE C Ordering Code "5.Through Drive and Porting": C

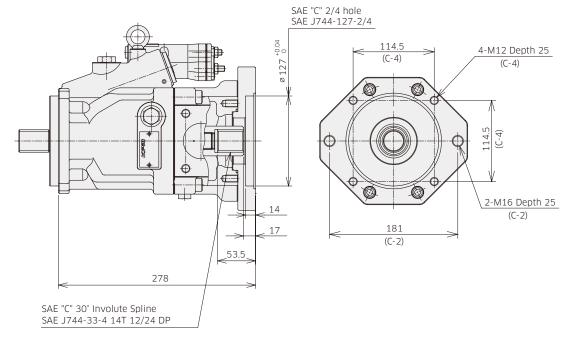

Involute spline according to ANSI B92.1a, 30° pressure angle, flat root, side fit


3-1 Installation Dimensions

*Dimensions in mm.

K3VLS85 with Cut-off/Load Sense Control (Clockwise Rotation)

Model Code : <u>K3VLS</u> <u>85</u> - <u>1</u> <u>0</u> <u>R</u> <u>C</u> <u>*</u> - <u>L1</u> <u>A</u>

Model Code : <u>K3VLS</u> <u>85</u> - <u>1</u> <u>0</u> <u>R</u> <u>C</u> \star - <u>L0</u> <u>A</u>

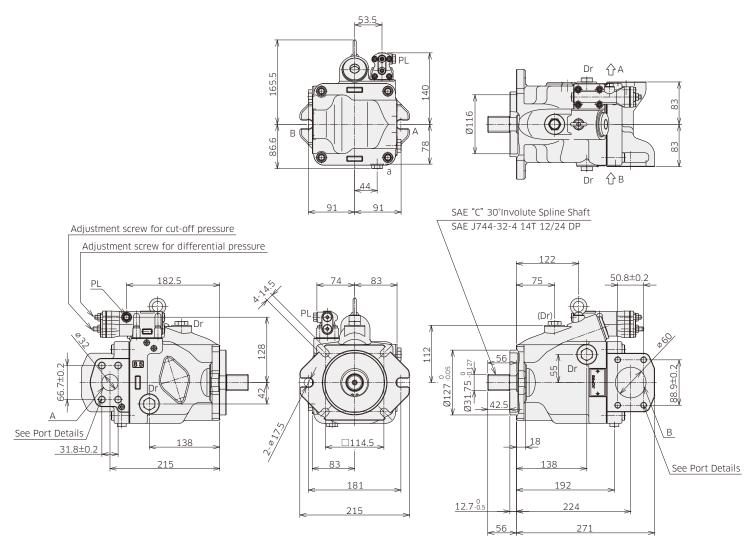


3-1 Installation Dimensions

* Dimensions in mm.

K3VLS85 Rear Port (Clockwise Rotation)

Model Code : <u>K3VLS 85</u> - <u>1 R R C *</u> - <u>L1 A</u>

Model Code : <u>K3VLS 85</u> - <u>1</u> <u>R</u> <u>R</u> <u>C</u> \star - <u>L0</u> <u>A</u>

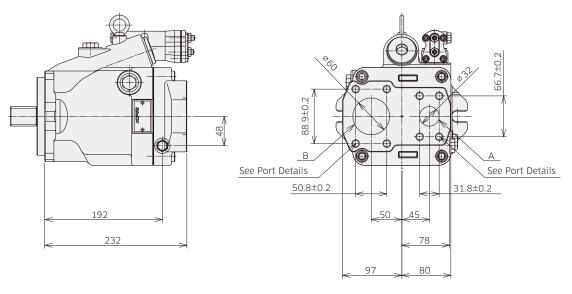

K3VLS85 Porting Details

Main SAE Flanged Ports

Des	Port name	Port size	Flange threads	
UNF Threaded Version ('S' in position 8 of model code)				
А	Delivery Port	SAE J518C high pressure (code 62) 1-1/4"	1/2-13UNC-2B-22	
В	Suction Port	SAE J518C std pressure (code 61) 2-1/2"	1/2-13UNC-2B-22	

Metric Version ('H' in position 8 of model code)

А	Delivery Port	SAE J518C high pressure (code 62) 1-1/4"	M12-23
В	Suction Port	SAE J518C std pressure (code 61) 2-1/2"	M12-22

Auxiliary Ports

Des	Port name	Port size
SAE Vers	sion	
Dr	Drain Port	3/4-16 UNF-2B-14.3 (ISO 11926-1: 1995)
PL	Load Sensing Port	7/16-20 UNF2B-11 (ISO 11926-1: 1995)
а	Gauge Port	9/16-18 UNF-2B-12.7 (ISO 11926-1: 1995)


3-1 Installation Dimensions

* Dimensions in mm.


K3VLS85 Through Drive Options

Through Drive SAE A

Ordering Code "5.Through Drive and Porting": A

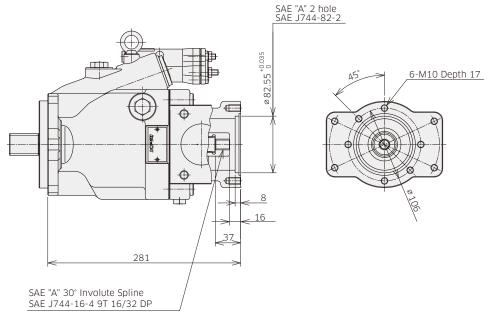

Through Drive SAE B Ordering Code"5.Through Drive and Porting": B

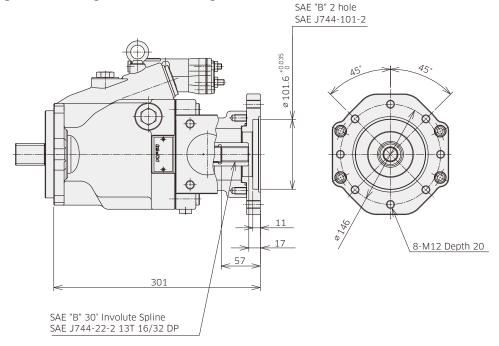

Involute spline according to ANSI B92.1a, 30° pressure angle, flat root, side fit


3-1 Installation Dimensions

* Dimensions in mm.


K3VLS85 Through Drive Options

Through Drive SAE BB

Ordering Code "5.Through Drive and Porting": BB

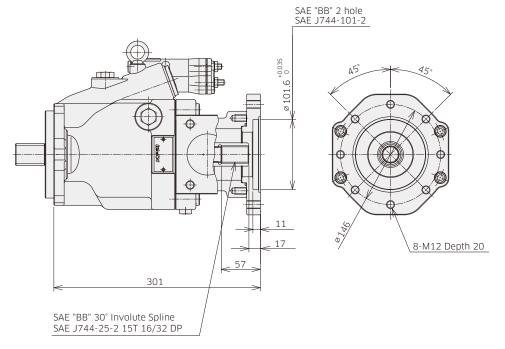

Trough Drive SAE C Ordering Code "5.Through Drive and Porting": C

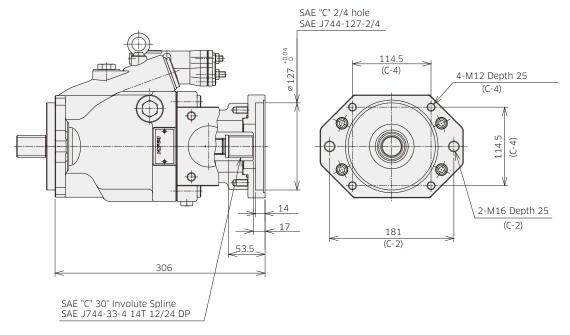

Involute spline according to ANSI B92.1a, 30° pressure angle, flat root, side fit


3-1 Installation Dimensions


*Dimensions in mm.

K3VLS105 with Cut-off/Load Sense Control (Clockwise Rotation)


Model Code : <u>K3VLS</u> <u>105</u> - <u>1</u> <u>0</u> <u>R</u> C<u>C</u> <u>*</u> - <u>L1</u> <u>A</u>

Model Code : <u>K3VLS</u> <u>105</u> - <u>10</u> <u>R</u> <u>CC</u> <u>*</u> - <u>L0</u> <u>A</u>

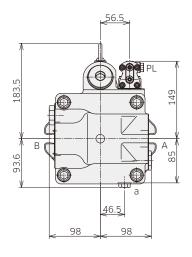

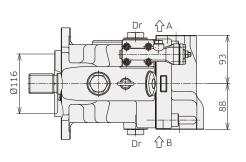

Adjustment screw for cut-off pressure

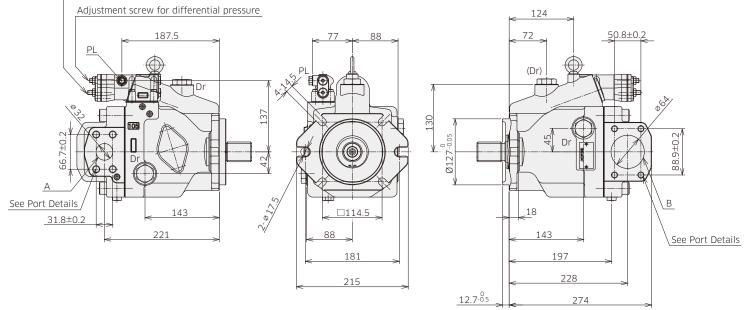


3-1 Installation Dimensions

* Dimensions in mm.


K3VLS105 Mounting Flange and Shaft Options

SAE CC Spline Shaft

Ordering Code "7. Mounting Flange and Shaft": CC

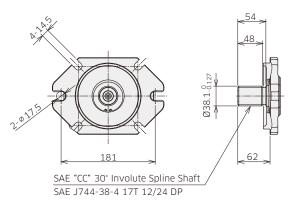

SAE C Spline Shaft Ordering Code "7.Mounting Flange and Shaft": C

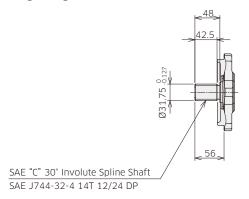

28


3-1 Installation Dimensions

* Dimensions in mm.

K3VLS105 Rear Port (Clockwise Rotation)

Model Code : <u>K3VLS 105</u> - <u>1</u> <u>R</u> <u>R</u> <u>CC</u> <u>*</u> - <u>L1</u> <u>A</u>

Model Code : <u>K3VLS</u> <u>105</u> - <u>1</u> <u>R</u> <u>R</u> <u>CC</u> \star - <u>L0</u> <u>A</u>

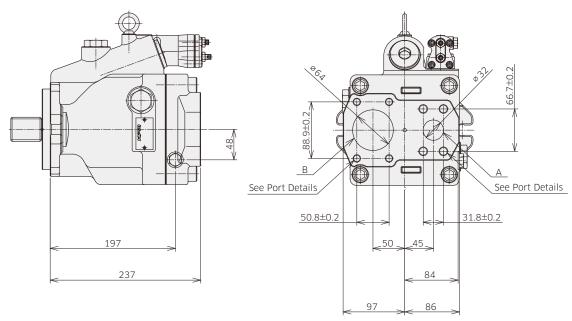

K3VLS105 Porting Details

Main SAE Flanged Ports

Des	Port name	Port size Flange thread			
UNF Threaded Version ('S' in position 8 of model code)					
А	Delivery Port	SAE J518C high pressure (code 62) 1-1/4"	1/2-13UNC-2B-22		
В	Suction Port	SAE J518C std pressure (code 61) 2-1/2"	1/2-13UNC-2B-22		

Metric Version ('H' in position 8 of model code)

А	Delivery Port	SAE J518C high pressure (code 62) 1-1/4"	M12-23
В	Suction Port	SAE J518C std pressure (code 61) 2-1/2"	M12-22

Auxiliary Ports

Des	Port name	Port size			
SAE Version					
Dr	Drain Port	1 1/16-12 UN-2B-19 (ISO 11926-1: 1995)			
PL	Load Sensing Port	7/16-20 UNF-2B-11 (ISO 11926-1: 1995)			
a	Gauge Port	9/16-18 UNF-2B-12.7 (ISO 11926-1: 1995)			


3-1 Installation Dimensions

*Dimensions in mm.


K3VLS105 Through Drive Options

Through Drive SAE A

Ordering Code "5.Through Drive and Porting": A

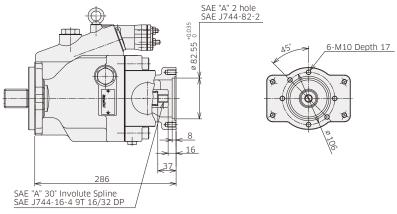


Through Drive SAE B Ordering Code "5.Through Drive and Porting": B

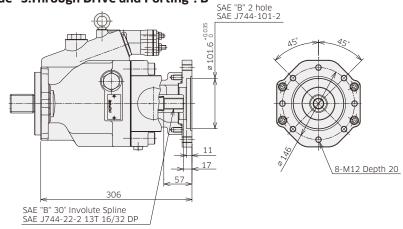

Through Drive SAE BB

Ordering Code"5.Through Drive and Porting": BB

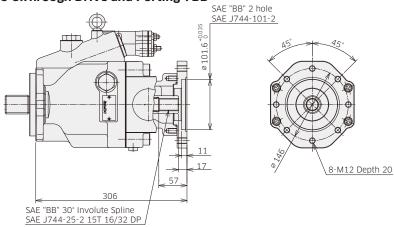

Involute spline according to ANSI B92.1a, 30° pressure angle, flat root, side fit


3-1 Installation Dimensions


* Dimensions in mm.

K3VLS105 Through Drive Options


Through Drive SAE C

Ordering Code "5.Through Drive and Porting": C

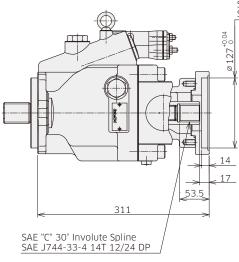

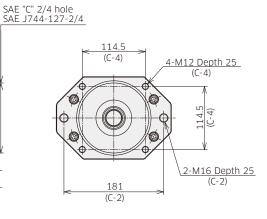

Through Drive SAE CC Ordering Code "5.Through Drive and Porting": CC

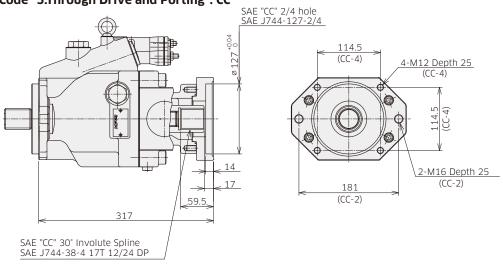

3-2 Installation of Auxiliary Pumps

Allowable mass moment for combination pump


K3VLS series can consist of multiple pumps using through drive mounting. The second pump can be attached up to the same size of the first pump. The table below shows the maximum allowable mass moment to the mounting flange of the first pump under the dynamic acceleration of 10G. The moment can be calculated by the formula shown below.

	K3VLS65		K3VLS85		K3VLS105	
	SAE B mount	SAE C mount	SAE C-2 mount	SAE C-4 mount	SAE C-2 mount	SAE C-4 mount
Allowable mass moment Tm (Nm) (dynamic acceleration of 10G)	301	463	408	378	419	394

Calculation formula for mass moment

Tm = (m1 \times L1 + m2 \times L2 + m3 \times L3 + …) \times 1 / 102

See next page for values.

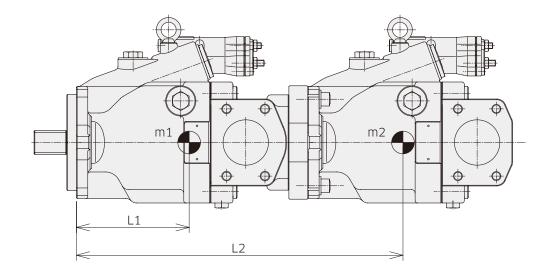

■ Values for calculation of mass moment

Through drive size	Length, weight	65 SAE B mount	65 SAE C mount	85	105
	Total length L (mm)	239	239	271	274
Without through drive, side ported	Center of gravity (from mounting face; mm)	117	113	126	131
	Weight (kg)	25	26	31	37
	Total length L (mm)	207	207	232	237
Without through drive, rear ported	Center of gravity (from mounting face; mm)	111	108	120	124
	Weight (kg)	24	24	29	35
	Total length L (mm)	253	253	281	286
SAE A	Center of gravity (from mounting face; mm)	129	126	137	138
	Weight (kg)	28	29	33	39
	Total length L (mm)	273	273	301	306
SAE B SAE BB	Center of gravity (from mounting face; mm)	143	143	150	150
	Weight (kg)	31	31	37	42
	Total length L (mm)	_	278	306	311
SAE C SAE CC	Center of gravity (from mounting face; mm)	—	138	149	149
	Weight (kg)	_	32	36	42

Please fill the table to specify the requirements.

3

-

2

Please contact us for any questions.

K3VLS series Inquiry Form

2

Please tick the box for options. Options with \star are under development.

Date: Machine Model: Application: Customer Name: Pump Model: 4 5 6 7 8 9 10 11 12 1 _ Model Code No. Requirements Kawasaki feed back 65 85

Swash Plate Type Axial Piston Pump

K3VLS

Items

Model Code

Pump Size

	-	05		
		105		
Series Type Code	4	1 : Standard Type		
		0 : Without Through Drive, Side ported		
		A : SAE-A Through Drive, Side ported		
		B : SAE-B Through Drive, Side ported		
		BB : SAE-BB Through Drive, Side ported		
Through Drive and Porting	5	C : SAE-C 2/4 bolt Through Drive, Side ported		
		CC : SAE-CC 2/4 bolt Through Drive, Side ported (for K3VLS105)		
		N : With Through Drive Shaft, Without Coupling,		
		Closed with Steel Cover, Side Ported		
		R : Without Through Drive, Rear Ported		
Direction of Rotation	6	R : Clockwise		
	0	L : Counterclockwise		
		B : SAE - B Mount & SAE - B Spline (for K3VLS65)		
Mounting Flange and Shaft	7	BB : SAE - B Mount & SAE - BB Spline (for K3VLS65)		
	/	C : SAE - C Mount & SAE - C Spline (for K3VLS65 / 85 / 105)		
		CC : SAE - C Mount & SAE - CC Spline (for K3VLS105)		
Flange Fixing Thread	8	S : SAE 4 - bolt Flange, UNC Threaded		
(Suction/Delivery)	0	H : SAE 4 - bolt Flange, Metric Threaded		
		Load Sense & Pressure Cut - off		
Flow Control	9	LO : with LS Bleed - off Orifice		
		L1 : without LS Bleed - off Orifice		
Differential Pressure Setting Range	10	A \therefore Standard Setting Range (1.0 \sim 3.0 MPa)		
(For the details see page 14)		C \therefore High Setting Range (1.5 \sim 4.0 MPa)		
		Blank : Without Any Additional Control		
		Torque Limit Control		
		A : Without Power Shift Control		
		B : With Power Shift Control, Pilot Operated		
Additional Control Options	11	C1 : With Power Shift Control, Electriic Proportional Reducing Valve (Voltage : 24V, AMP Connecter)		
		C2 : With Power Shift Control, Electriic Proportional Reducing Valve (Voltage : 24V, Deutsch Connecter)		
		C3 : With Power Shift Control, Electriic Proportional Reducing Valve (Voltage : 12V, Deutsch Connecter)	□ ★	
Torque Limit Setting (Available only with the attachment of Torque Limiter)	12	 ** : For Torque Limiting Refer To Horsepower Setting Code (Under Preparation) 		
Comments (i	Other rea	irements) Operating condition, Duty	cycle etr	(Describe your detail)
comments (



Kawasaki Heavy Industries, Ltd.

Precision Machinery Company

http://www.khi.co.jp/kpm/

Tokyo Head Office 1-14-5 Kaigan, Minato-ku, Tokyo 105-8315, Japan Phone +81-3-3435-6862 Fax. +81-3-3435-2023

Kobe Head Office

Kobe Crystal Tower, 1-3 Higashikawasaki-cho 1-chome, Chuo-ku, Kobe 650-8680,

Japan Phone +81-78-360-8607 Fax. +81-78-360-8609

Nishi-kobe Works

234, Matsumoto, Hasetani-cho, Nishi-ku, Kobe 651-2239, Japan Phone +81-78-991-1160 Fax. +81-78-991-3186

OVERSEAS SUBSIDIARIES

Kawasaki Precision Machinery (UK) Ltd.

Ernesettle Lane, Ernesettle, Plymouth, Devon, PL5 2SA United Kingdom Phone +44-1752-364394 Fax. +44-1752-364816 http://www.kpm-eu.com

Kawasaki Precision Machinery (U.S.A.), Inc. 3838 Broadmoor Avenue S.E. Grand Rapids, Michigan 49512, U.S.A. Phone +1-616-975-3100 Fax. +1-616-975-3103 http://www.kpm-usa.com

Kawasaki Precision Machinery (Suzhou) Ltd.

668 JianLin Rd, New District, Suzhou, 215151 China Phone +86-512-6616-0365 Fax. +86-512-6616-0366

Kawasaki Precision Machinery Trading (Shanghai) Co., Ltd. 17th Floor (Room 1701), The Headquarters Building, No168, XiZang Road (M), Huangpu District, Shanghai, 200001, China

Phone +86-21-3366-3800 Fax. +86-21-3366-3808

Kawasaki Chunhui Precision Machinery (Zhejiang) Ltd. No.200 Yasha Road Shangyu Economic Development Zone, Shansyu, Zhejiang, 312300, China Phone +86-575-8215-6999 Fax. +86-575-8215-8699

Flutek, Ltd.

192-11, Shinchon-dong, Changwon, Kyungnam, 51567, Korea Phone +82-55-210-5900 Fax. +82-55-286-5557

Wipro Kawasaki Precision Machinery Private Limited No. 15, Sy. No. 35 & 37, Kumbalgodu Industrial Area, Kumbalgodu Village, Kengeri Hobli, Bangalore, – 560074 ,India

Materials and specifications are subject to change without manufacturer's obligation.



QR code Precision Machinery Company Website